

strands®

-lighting division

MANUAL

LIGHTHEAD ULTRA SLIM

RED = +VDC

BLACK = - TO CHASSIS GROUND

YELLOW = PATTERN SELECTION

Apply yellow to black:

Less than 1 second for next pattern.

1-3 seconds for previous pattern.

3-5 seconds for factory mode. (#1 single flash)

More than 5 seconds for turn off. When power is reapplied, it will resume the previous pattern.

WHITE = SYNCHRONIZATION (Maximum 15 pcs)

PATTERN #	DESCRIPTION	PATTERN #	DESCRIPTION
1	Single flash ECE R65	14	Triple flash alternate
2	Single flash slow	15	Quad flash alternate
3	Double flash ECE R65	16	Octa flash alternate
4	Double flash slow	17	Single flash split
5	Triple flash	18	Double flash split
6	Quad flash fast ECE R65	19	Quad flash split
7	Quad flash slow	20	Octa flash split
8	Octa flash fast	21	Single flash split accelerate
9	Octa flash slow	22	Double flash split accelerate
10	Twelve flash	23	SOS flash
11	Sixteen flash	24	Cycle 1,8,3,9,4,18
12	Single flash alternate	25	Cycle 2,7,9,11,19,21
13	Double flash alternate	26	Steady on

READ THIS BEFORE INSTALLATION

READ ALL INSTRUCTIONS AND STUDY DIAGRAMS BEFORE INSTALLING YOUR NEW LIGHTS!

LEGAL MOUNTING

Check with state or local authorities for laws governing usage and proper mounting of your new lights.

TAKE CARE OF YOUR PRODUCT

Keep the product clean. Dirt on the lens and heat-sink may shorten the products lifetime.

We recommend using lukewarm water and alkaline degreasing.

Follow the degreasing instructions carefully and rinse off gently with cold or lukewarm water on low pressure.

WARNING!

Strong chemicals should not be used on the product. If you accidentally get strong chemicals on the product, rinse off immediately, use plenty of water so that no chemicals remain in any joint.

Some chemicals have a small amount of solvent in them, this can dissolve sealing adhesives and compromise the product's waterproofness.

Some chemicals pull out liquid from plastic and rubber-based components, which makes the plastic or rubber brittle and bursts more easily.

Be careful not to use high water pressure close up on the product.

If you use high water pressure at short distances, most products find it difficult to close out the water.

INSTALLATION

If there is a contact/connector on the product, it should not be cutted. If the connector is cut, the warranty is not valid.

If the product has loose cable and no connector. If the cable is shorter than 50 cm, the cable must not be cutted. If the cable is cut, the warranty is not valid.

If the cable is longer than 50 cm, it is ok to shorten the cable, but not shorter than 50 cm.

If the cable is cut shorter than 50 cm, the warranty is not valid.

Tighten screws and bolts so that they do not loosen or chafe.

Do not tighten screws so hard that the protective bearings on the product breaks.

WARNING!

Do not use higher volts than the product description states.

This light becomes hot under continuous use. Don't remove or touch the casing for at least 30 minutes after turning the lamp off.

Part no. 850201HP-A, 850202HP-A, 850203HP-A

Contact us if you need support: support@strands.se or +46(0)320-450450



www.strands.se
www.strandseurope.com